

AEGER-120009M/C

12 MP 1/1.7" CMOS GigE Area Scan Camera



GEN*i*CAM

GigE
VISION

Introduction

AEGER-120009M/C camera adopts Sony® IMX226 sensor to provide high-quality image. It uses GigE interface to transmit non-compressed images in real time with max. frame rate reaching 9.6 fps.

Key Feature

- Adopts GigE interface and max. transmission distance of 100 meters without relay.
- Up to 128 MB local memory for burst transmission and retransmission.
- Supports auto exposure control, LUT, Gamma correction, etc.
- Supports hardware trigger, software trigger, etc.
- Compatible with GigE Vision Protocol V2.0, GenICam Standard, and third-party software based on these protocol and standard.


Available Model

- Mono camera: AEGER-120009M
- Color camera: AEGER-120009C


Applicable Industry

Electronic semiconductor, factory automation, logistic code reading, medical packaging, etc.

Sensor Quantum Efficiency

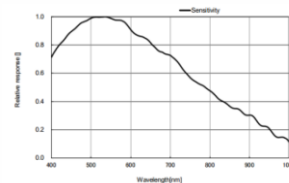


AEGER-120009M

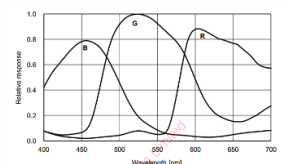

AEGER-120009C

Dimension

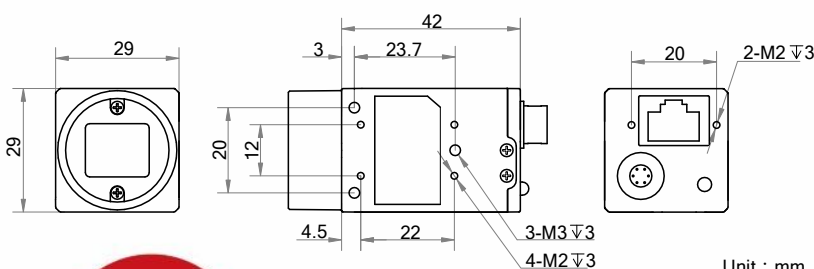

Unit : mm



Specification

Model	AEGER-120009M		AEGER-120009C
Camera			
Sensor type	CMOS, rolling shutter		
Sensor model	Sony® IMX226		
Pixel size	1.85 μm × 1.85 μm		
Sensor size	1/1.7"		
Resolution	4024 × 3036		
Max. frame rate	9.6 fps @4024 × 3036		
Dynamic range	70.5 dB		
SNR	40.5 dB		
Gain	0 dB to 20 dB		
Exposure time	34 μs to 2 sec		
Exposure mode	Off/Once/Continuous exposure mode, supports Global Reset		
Mono/color	Mono	Color	
Pixel format	Mono 8/10/10p/12/12p	Mono 8/10/12, Bayer GB 8/10/10p/12/12p, YUV422Packed, YUV422_YUYV_Packed, RGB 8, BGR 8	
Binning	Supports 1 × 1, 2 × 2, 4 × 4		
Decimation	Not support		
Reverse image	Supports horizontal and vertical reverse image output		
Image buffer	128 MB		
Electrical feature			
Data interface	Gigabit Ethernet, compatible with Fast Ethernet		
Digital I/O	6-pin Hirose connector provides power and I/O, including opto-isolated input × 1 (Line 0), opto-isolated output × 1 (Line 1), bi-directional non-isolated I/O × 1 (Line 2).		
Power supply	12 VDC, supports PoE		
Power consumption	Typ. 2.7 W@12 VDC	Typ. 3.0 W@12 VDC	
Mechanical			
Lens mount	C-Mount		
Dimension	29 mm × 29 mm × 42 mm (1.1" × 1.1" × 1.7")		
Weight	Approx. 68 g (0.15 lb.)		
Ingress protection	IP30 (under proper lens installation and wiring)		
Temperature	Working temperature: 0 °C to 50 °C (32 °F to 122 °F) Storage temperature: -30 °C to 70 °C (-22 °F to 158 °F)		
Humidity	20% to 80% RH, non-condensing		
General			
Client software	MVS or third-party software meeting with GigE Vision Protocol		
Operating system	32/64-bit Windows XP/7/10, 32/64-bit Linux and 64-bit MacOS		
Compatibility	GigE Vision V2.0, GenICam		
Certification	CE, RoHS, KC		

HIKROBOT

Hangzhou Hikrobot Co., Ltd.
en.hikrobotics.com

© Hangzhou Hikrobot Co., Ltd. All Rights Reserved.

Hangzhou Hikrobot does not tolerate any infringement. Any organization or individual may not imitate or reproduce in whole or in part of the content. The data herein is based on Hikrobot's internal evaluation. Actual data may vary depending on specific configuration and operating condition. The information herein is subject to change without notice. All the content has been checked conscientiously. Nevertheless, Hikrobot shall not be liable to damages resulting from errors, inconsistencies or omissions.